

## M-WRG-S with 4-level ventilation rate selection

With the 3-way ventilation rate switch I – II – III, you are able to select 3 different ventilation rates and a boost ventilation.

Normally the ventilation unit operates at the ventilation rate selected by the 3-way switch.

**Boost ventilation ( I – II – I ) :** If the 3-way switch is switched from rate I to rate II and back to rate I within 2 seconds, the unit will start the boost ventilation for 15 minutes. Afterwards it will automatically return to the preset ventilation rate of the 3-way switch.

The boost ventilation may be cancelled immediately by repeating the switch sequence.

The ventilation output (m<sup>3</sup>/h) per ventilation rate is preset as follows:

| Ventilation rate  | Ventilation output (air flow per hour) |
|-------------------|--|
| I                 | 15 m <sup>3</sup> /h                   |
| II                | 30 m <sup>3</sup> /h                   |
| III               | 60 m <sup>3</sup> /h                   |
| Boost ventilation | 100 m <sup>3</sup> /h for 15 minutes   |

(The values can be changed upon customer's request during manufacturing of the unit):

